


B UPDATED LABELS AND LOCKS PER ECO

REV DESCRIPTION

TO INSTALL LOCKOUT DEVICE, PLACE AROUND CORDSET END AND CLOSE UNTIL CONNECTOR SNAPS CLOSED. REFERENCE DIAGRAM OF CONNECTOR.

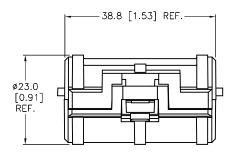

LOCKOUT DEVICE FITS ALL STRAIGHT TURCK EUROFAST CONNECTORS. (RKC, RSC, RKS, RSS, RKSW, RSSW)

TO REMOVE LOCKOUT DEVICE, INSERT SMALL SCREWDRIVER INTO LOCKING GROOVE AS SHOWN IN PICTURE. ROTATE SCREWDRIVER IN DIRECTION SHOWN UNTIL LOCKING DEVICE RELEASES.

SOURCE DRAWING - FOR REFERENCE ONLY

			RELATED DOCUMENTS 1. 9-RDV-166 2. 3. 4.	3RD ANGLE PROJECTION	THIS DRAWING IS CONFIDENTIAL AND THE PROPERTY OF TURCK INC. USE OF THIS DOCUMENT WITHOUT WRITTEN PERMISSION IS PROHIBITED.	TURCK Inc High Technology Sensors and Automation Controls		3000 CAMPUS DRIVE MINNEAPOLIS, MN 55441 1-800-544-7769 (763) 553-7300 (763) 553-0708 fax turck.com	
			FINISH	ALL DIMENSIONS DISPLAYED ON THIS DRAWING ARE FOR REFERENCE ONLY CONTACT TURCK FOR MORE INFORMATION	DRFT RDS	DATE 12/29/04 SCALE 1=1.0	DESCRIPTION LOCK—EL	LOCK-EURO-C	
					UNIT OF MEASUREMENT MILLIMETERS		IDENTIFICATION NO.		REV
		54524					A0885		В
BY	DATE	ECO NO.			DO NOT SCALE THIS DRAWING		FILE: A0885	SHEE	T 1 OF 1