

Industri<mark>al</mark> Automation

Basic Install of excom

👷 in Pactware

MANUAL



Table of Contents

Table of Contents	1
About This Guide	2
Setup	3
Software	
•••••	

About This Guide

This guide will show the user how to install Pactware, the BL_DTM's, the PB-XEPI2 DTM, and the Excom DTM.

Setup

Software

Step 1: Download and install Pactware 4 SP1 and BL_DTM's.

Go to "turck.us". Under the "Support" tab, click on "Software / Videos"



Click on "IO Assissmant Software".



	VID to download Fa	ciware.			
- Thttp://tu	urck.us/Support/Software_~_	Videos/IO_Assistant_Soft	ware.htm	<u>م</u>	🖒 🕆 🖈
Software	×				
👍 🖵 TURCK 🖵 Co	nnect 🔫 Teams 🔫 Apps	🔫 Networks 🔫 Video	os 🖓 BLV		
					TURCK
TURCK	·····Sense It!···	Connect I	gloop Bus		wentes
SUSA,	Home v Prod	ucts 👳 🦳 Support 👳	Catalog	s/Literature 🗸	
Search: 🖁	Home >> p: >> >> turck.u	us >> Support >> Software	e ~ Videos		
Part or ID number	LO Assistant Coff				
by Keyword Tips Gob	IO Assistant Soft	ware			
Networks Support	IO Assistant VA 0 is n	nade un of multiple insta	llations This is	due to the fact that it is a DTM wh	ich
Application Notes	needs to run within an	FDT, or Frame. The Fra	me we have cho	sen to provide is PACTware. Plea	ase
Contractors	choose the appropriat	te package.			
Documentation			Full	Lite	
EDS/GSD Files	Draguiaita Inatallatia				
Firmware	Prequisite installatio	JIIS	v		
Integrators	Pactware 4 SP1		\checkmark		
Partners	BL DTM's		\checkmark	\checkmark	
Software	Instructional Video				
(800) 544-7769		Г	Full ~ 146M	3	
http://turck.us/assets/IC	0A4_Full.zip		4	7	¥
Contraction of the second s					

Click on "Full~146MB" to download Pactware.

Follow the "HOW TO Install PACTware.pdf" instructions.

🔾 🖓 - 🚺 « SYV	▶ IOA4 ▶ 🔹 🍫 Search	10A4_Full.zip	Q
Organize 🔻 Extract	all files	:= 👻 🗍	•
🔶 Favorites	Name	Туре	Com
📃 Desktop	퉬 Step 1	File folder	
🚺 Downloads	Je Step 2	File folder	
🕮 Recent Place	HOWTO Install PACTware.pdf	Adobe Acrobat Document	
💔 Dropbox	-		
🖼 Libraries 🔻	•		Þ
HOWTO Ins	tall PACTware.pdf Compressed size: Size:	225 KB 334 KB	

Pactware and BL_DTM's are now installed.

Step 2: Download and install the PB-XEPI2 DTM

Go to "<u>www.turck.de/en</u>". Click on "Download" -> "Software" -> "configuration tool (FDT/DTM)" -> DTM"s for Diagnostic Power Conditioner" -> "Show products"



Click on "Software DTM for Ethernet/PROFIBUS Interface Type 0# Ident no: DTM PB-XEPI"



Click on "Download"						
A ttp://pdb.turck.de/en/DE/prod	uct/00000013000212560001003a				5 - Q	☆ ★
🥖 Hans Turck GmbH & Co. K 🗙						
👍 🖵 TURCK 🖵 Connect 🤫 Teams 🤫 A	Apps 🔫 Networks 🤫 Videos 🦿	w BLV				
Sense it! Connect it! Bu	us it! Solve it!					
Home Sitemap About us Contact Prod	lucts Support Download Al	duelles Press TUR	CK Portal			
Glossary						
->fieldbus technology -> product series -	⇒remote I/O system excom®	-> configuration				
Direct search	Product					
→ Product search		71.0	-			
Country		-410	7.00			
Germany (en) V start!						
Product search	Software		Add article	to basket		
sensor technology	DTM for Ethernet/PROFIBUS Interface Information material					
connection technology	Order number: DTM PB-X	EPI				
Interface technology						
fieldbus technology	Communication I PROFIBUS via E	DTM for access to				
- product series	 Additionally required 	ired software:				
▪ modular IP20 I/O system: BL20	PACT <i>ware</i> ™ • System software requirements:					
+ modular IP67 I/O system: BL67						
modular IP67 I/O system: <emphasis style="italic">piconet®</emphasis 	Windows XP, Wi	ndows /				
+ Compact I/O modules in IP67	Info material	Description		File size	Download	
Compact I/O modules in IP20		DTM for Ethernet	PROFIBILIS	THE SILO		
∃ remote I/O system excom®	configuration software	Interface	11011003	10030 KB	Download	

COC V 🛃 « Dow 🕨 DTM_PB-XEPI_Setup		✓ 4 Search DTM_PB-XEF	PI_Setup.zip 👂
Organize 🔻 Extract all files			:=
☆ Favorites	-	Name	Туре
🧮 Desktop	=	CommDTM_setup.exe	Application
🝺 Downloads –			
Recent Places			
💝 Dropbox			
😝 Libraries			
Documents	-	• •	Þ

Follow the install instructions

The PB-XEPI2 DTM is now installed

Step 3: Download and install the Excom DTM



Click on "Software DTM excom remote I/O Type # Ident no: DTM excom"



Click on "Download"



Follow the install instructions

OO V Market Ward Commence Comm	✓ ✓ Search DTM_excom_Setup.zip	P
Organize 🔻 Extract all files	8==	• 🔳 🔞
☆ Favorites	Name	Туре
 Desktop Downloads Recent Places Dropbox 	excom_DTM_1.10.0012.exe	Application
Libraries Documents 1 item	< <u> </u>	4

The Excom DTM is now installed

17/