
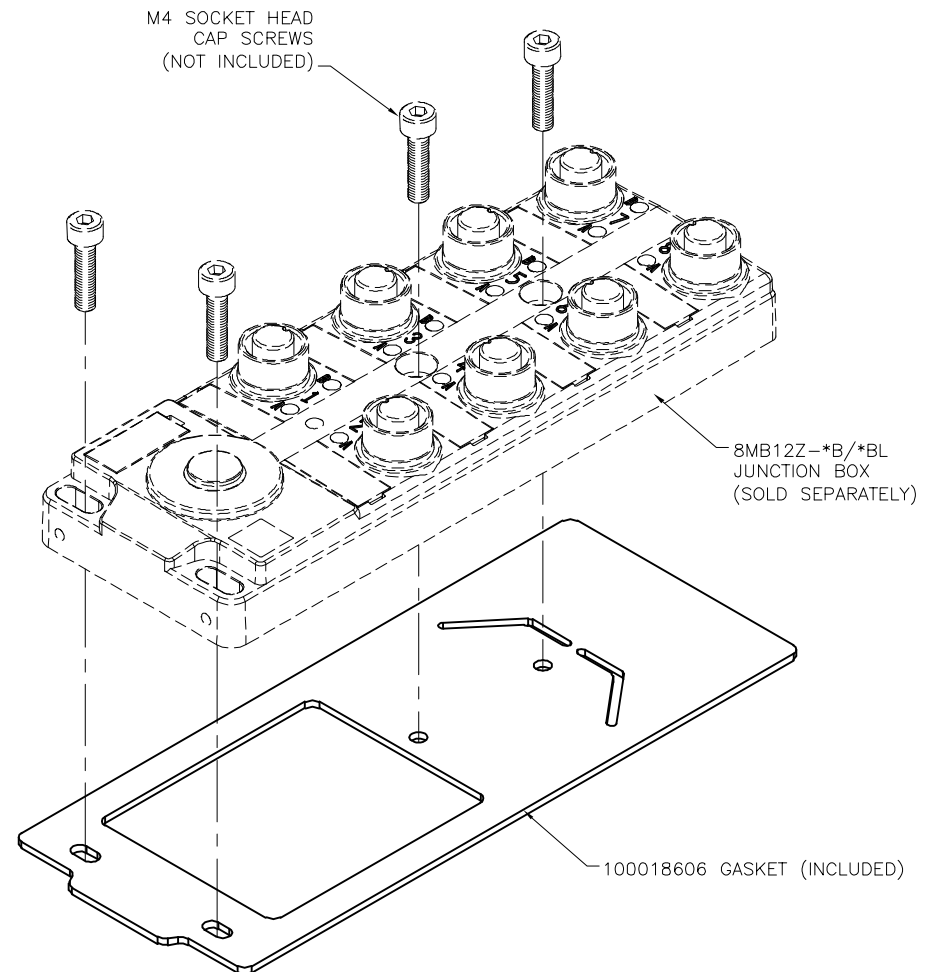


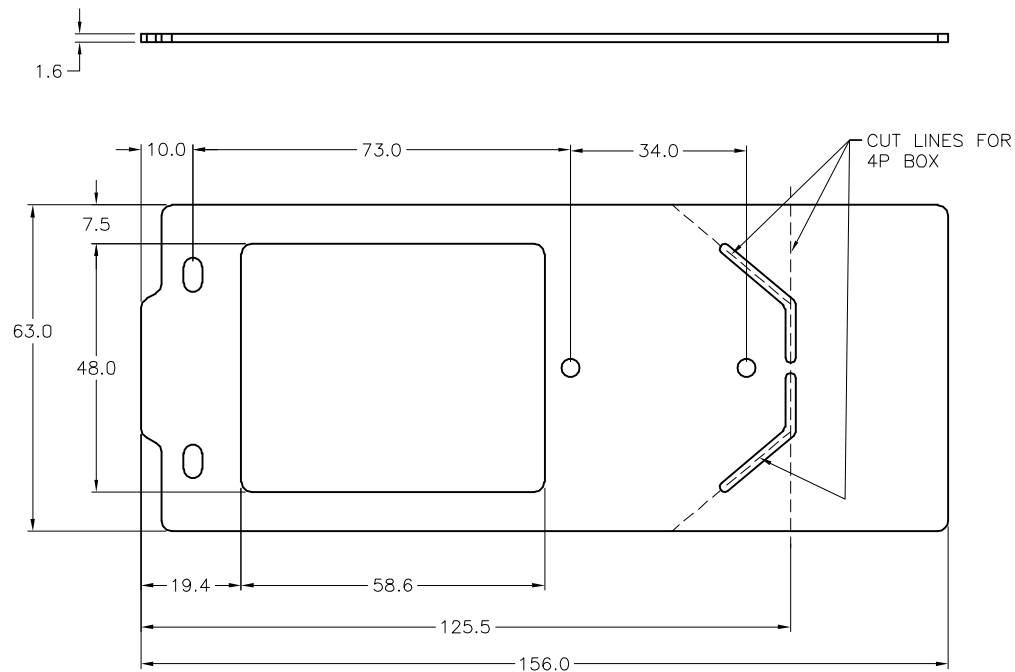

4 PORT JUNCTION BOX ONLY:

1. USING A ROBUST SHEARS OR SCISSORS, CUT ALONG THE CUTLINE INDICATED IN THE DRAWING VIEW

2. DISCARD THE SMALLER PIECE OF MATERIAL

3. FOLLOW THE INSTALLATION INSTRUCTIONS BELOW

INSTALLATION INSTRUCTIONS:

1. PEEL OFF THE PAPER LINER AND DISCARD .

2. ROUTE THE WIRES OR CABLE THRU THE LARGE SQUARE OPENING IN THE GASKET

3. GENEROUSLY APPLY A GENERAL PURPOSE SILCONE SEALANT RTV UNDER THE SCREW HEADS (NOT INCLUDED)

4. INSERT THE SCREWS INTO THE JUNCTION BOX MOUNTING HOLE AND THEN THRU THE CORRESPONDING HOLES IN THE GASKET

5. TIGHTEN THE SCREWS TO THE PANEL TO ~1NM TORQUE

SOURCE DRAWING - FOR REFERENCE ONLY

RELATED DOCUMENTS		3RD ANGLE PROJECTION		THIS DRAWING IS CONFIDENTIAL AND THE PROPERTY OF TURCK INC. USE OF THIS DOCUMENT WITHOUT WRITTEN PERMISSION IS PROHIBITED.		3000 CAMPUS DRIVE MINNEAPOLIS, MN 55441 1-800-544-7769 (763) 553-7300 (763) 553-0708 fax www.turck.us TURCK	
1. 2. 3. 4.							
MATERIAL		DRFT RDS		DATE 04/01/20		DESCRIPTION	
SEE SPECIFICATIONS		APVD L.F.		SCALE 1=1.5		GASKET,BOX-MB12Z,NEOPRENE,BLK-(1/BAG)	
FINISH		UNIT OF MEASUREMENT		MILLIMETERS		IDENTIFICATION NO.	
SEE SPECIFICATIONS						100018606	
		DO NOT SCALE THIS DRAWING		FILE: 100018606		REV	
						B	
						SHEET 1 OF 1	

B	UPDATE INSTRUCTIONS	NF	11/24/20	76312
REV	DESCRIPTION	BY	DATE	ECO NO.