
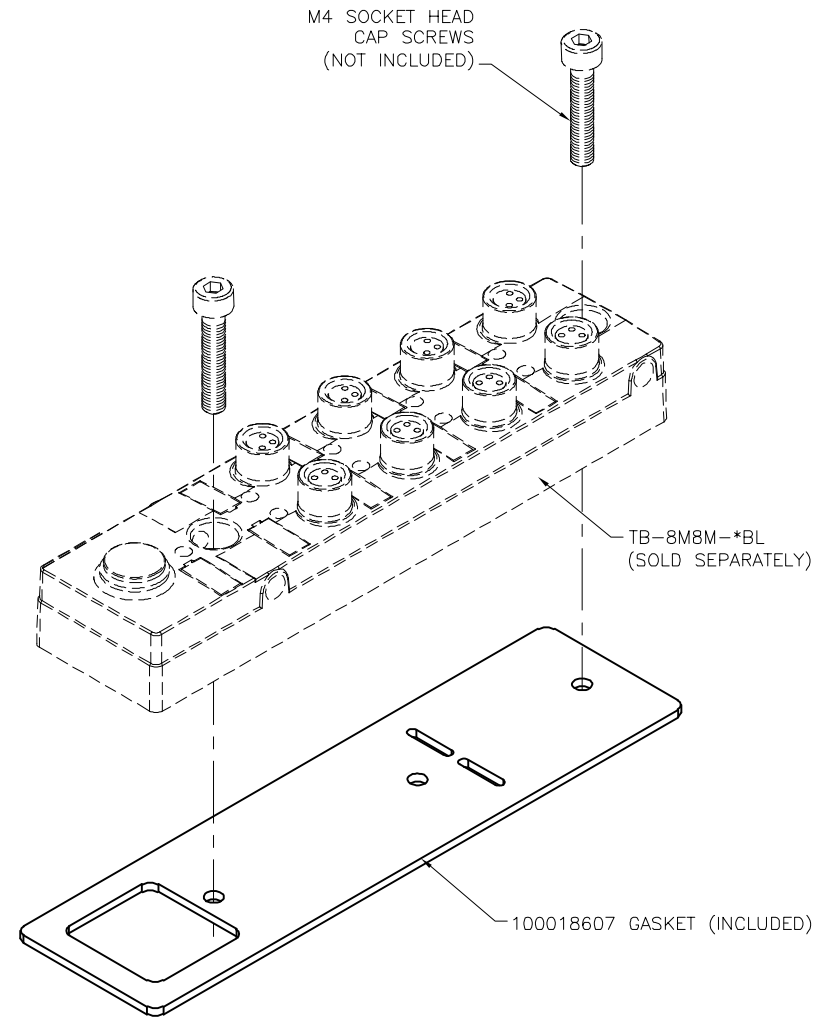


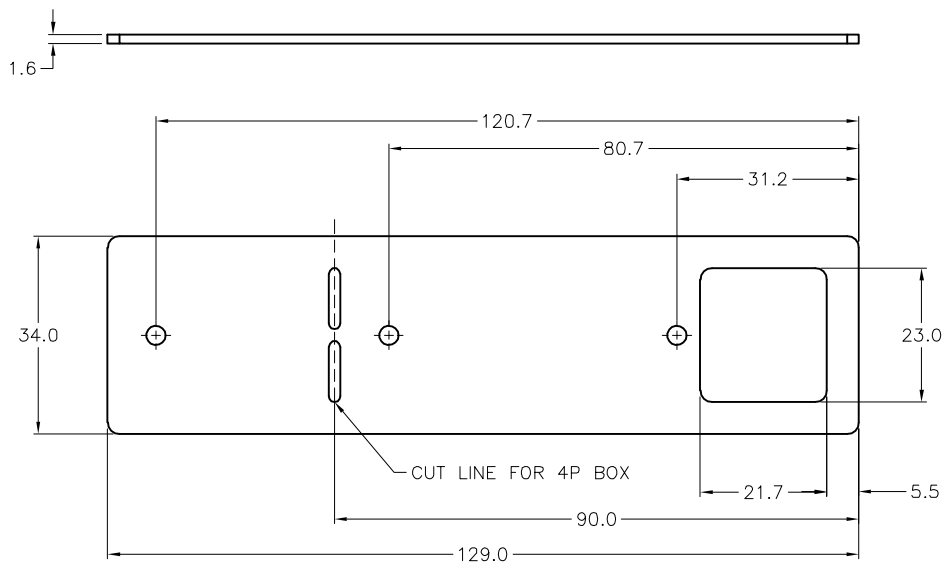

4. PORT JUNCTION BOX ONLY:

1. USING A ROBUST SHEARS OR SCISSORS, CUT ALONG THE CUTLINE INDICATED IN THE DRAWING VIEW

2. DISCARD THE SMALLER PIECE OF MATERIAL

3. FOLLOW THE INSTALLATION INSTRUCTIONS BELOW

INSTALLATION INSTRUCTIONS:

1. PEEL OFF THE PAPER LINER AND DISCARD .


2. ROUTE THE WIRES OR CABLE THRU THE LARGE SQUARE OPENING IN THE GASKET

3. GENEROUSLY APPLY A GENERAL PURPOSE SILCONE SEALANT RTV UNDER THE SCREW HEADS (NOT INCLUDED)

4. INSERT THE SCREWS INTO THE JUNCTION BOX MOUNTING HOLE AND THEN THRU THE CORRESPONDING HOLES IN THE GASKET

5. TIGHTEN THE SCREWS TO THE PANEL TO ~1NM TORQUE

SOURCE DRAWING - FOR REFERENCE ONLY

RELATED DOCUMENTS 1. 2. 3. 4.	3RD ANGLE PROJECTION			THIS DRAWING IS CONFIDENTIAL AND THE PROPERTY OF TURCK INC. USE OF THIS DOCUMENT WITHOUT WRITTEN PERMISSION IS PROHIBITED.	TURCK		3000 CAMPUS DRIVE MINNEAPOLIS, MN 55441 1-800-544-7769 (763) 553-7300 (763) 553-0708 fax www.turck.us	
MATERIAL	ALL DIMENSIONS DISPLAYED ON THIS DRAWING ARE FOR REFERENCE ONLY	DRFT	RDS	DATE	04/01/20			DESCRIPTION
SEE SPECIFICATIONS		APVD	L.F.	SCALE	1=1.3			
FINISH		UNIT OF MEASUREMENT			IDENTIFICATION NO.			REV
SEE SPECIFICATIONS		MILLIMETERS						
	CONTACT TURCK FOR MORE INFORMATION	DO NOT SCALE THIS DRAWING			FILE: 100018607			SHEET 1 OF 1