


B1N360V-Q20L60-2LU3-H1151/3GD Inclinometer

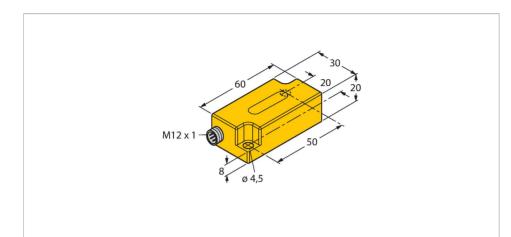


Technical data

| Туре | B1N360V-Q20L60-2LU3-H1151/3GD |
|--|---|
| ID | 1534114 |
| Measuring principle | Acceleration |
| General data | |
| Measuring range | 0360 ° |
| Number of measuring axes | 1 |
| Mounting conditions | Vertical |
| Repeatability | \leq 0.2 % of measuring range A - B |
| Linearity deviation | ≤ 0.6 % |
| Temperature drift | ≤ ± 0.05 %/K |
| Resolution | ≤ 0.14 ° |
| Electrical data | |
| Operating voltage $U_{\scriptscriptstyle B}$ | 1030 VDC |
| Isolation test voltage | 0.5 kV |
| Short-circuit protection | yes |
| Wire break/reverse polarity protection | yes/Complete |
| Output function | 5-pin, Analog output |
| Voltage output | 0.14.9 V |
| | 2 outputs, one for CW and one for CCW |
| Load resistance voltage output | ≥ 40 kΩ |
| Response time | 0.1 s |
| | Time for the output signal to reach 90% of the adjusted measuring range |
| Current consumption | 50105 mA (voltage-dependent) |

Features

- Rectangular, plastic, PC
- Compact housing
- Connection via M12 × 1 male
- Response time 0.1 s
- 10...30 VDC
- Two counter-running 0.1 ... 4.9 V analog outputs improve machine safety through redundancy
- ATEX category II 3 G, Ex zone 2
- ATEX category II 3 D, Ex zone 22

Wiring diagram

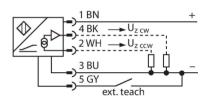



Functional principle

The TURCK inclinometers incorporate a micromechanical pendulum, operating on the principle of MEMS technology (Mikro Elektro Mechanic Systems).


The pendulum basically consists of two 'plate' electrodes arranged in parallel with a dielectric placed in the middle. When the sensor is inclined, the dielectric in the middle moves, causing the capacitance ratio between both electrodes to change.

The downstream electronics evaluates this change in capacitance and generates a corresponding output signal.




Technical data

| Approval acc. to | ATEX declaration of conformity TURCK Ex-12002H X |
|---|--|
| Device marking | Ex II 3 G Ex nA IIC T5 Gc/II 3 D Ex tc IIIC T85 °C Dc |
| Mechanical data | |
| Design | Rectangular, Q20L60 |
| Dimensions | 60 x 30 x 20 mm |
| Housing material | Plastic, PC |
| Electrical connection | Connector, M12 × 1 |
| Environmental conditions | |
| | |
| Ambient temperature | -30+70 °C |
| Ambient temperature | -30+70 °C For explosion hazardous areas see instruction leaflet |
| Ambient temperature Vibration resistance | For explosion hazardous areas see |
| | For explosion hazardous areas see instruction leaflet |
| Vibration resistance | For explosion hazardous areas see instruction leaflet 55 Hz (1 mm) |
| Vibration resistance Shock resistance | For explosion hazardous areas see instruction leaflet 55 Hz (1 mm) 30 g (11 ms) IP68 |

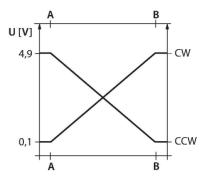

Mounting instructions

Mounting instructions/Description

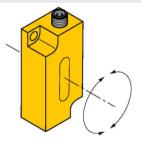

Adjusting the measuring range via TX1-Q20L60 teach adaptor

Setting the angular range in CW direction:

Move sensor to start position
Press and hold Teach-Gnd until the output is

set to < 0.1 V (approx. 1 s)

3. Move sensor to end position

4. Press and hold Teach-Gnd until the output is set to 4.9 V (approx. 3 s)


Resetting the angular range: 1. Press and hold Teach-Gnd until the output is set to 2.5 V (approx. 6 s) 2. Angle measurement is set back to 360° degrees (in position "connector outgoing topwards" the sensor provides an output signal in accordance with 0° degrees)

2|4



Accessories

GUARD-Q20L60

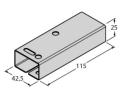

A9684

Protective housing for Q20L60 inclinometers for protecting against mechanical impact; material: Stainless steel



Instructions for use

Intended use

This device fulfills the directive 2014/34/EC and is suited for use in explosion hazardous areas according to EN60079-0:2009, EN60079-15:2010 and EN60079-31:2009In order to ensure correct operation to the intended purpose it is required to observe the national regulations and directives.

For use in explosion hazardous areas conform to classification

II 3 G and II 3 D (Group II, Category 3 G, electrical equipment for gaseous atmospheres and category 3 D, electrical equipment for dust atmospheres).

Marking (see device or technical data sheet)

Ex II 3 G Ex nA IIC T5 Gc acc. to EN 60079-0:2009 and EN 60079-15:2010 and Ex II 3 D Ex tc IIIC T85 °C Dc acc. to EN 60079-0:2009 and EN 60079-31:2009

Local admissible ambient temperature

-30...+70 °C

Installation/Commissioning

These devices may only be installed, connected and operated by trained and qualified staff. Qualified staff must have knowledge of protection classes, directives and regulations concerning electrical equipment designed for use in explosion hazardous areas.Please verify that the classification and the marking on the device comply with the actual application conditions.

Installation and mounting instructions

Avoid static charging of cables and plastic devices. Please only clean the device with a damp cloth. Do not install the device in a dust flow and avoid build-up of dust deposits on the device. If the devices and the cable could be subject to mechanical damage, they must be protected accordingly. They must also be shielded against strong electro-magnetic fields. The pin configuration and the electrical specifications can be taken from the device marking or the technical data sheet. In order to avoid contamination of the device, please remove possible blanking plugs of the cable glands or connectors only shortly before inserting the cable or opening the cable socket.

Special conditions for safe operation

For devices with M12 connectors please use the supplied safety clip SC-M12/3GD. The safety clips SC-M12/3GD are not required when using the protective housing SG-Q20L60 or GUARD-Q20L60.Do not disconnect the plug-in connection or cable under voltage.Please attach a warning label permanently in an appropriate fashion in close proximity to the plug-in connection with the following inscription: Nicht unter Spannung trennen / Do not separate when energized.The device must be protected against any kind of mechanical damage and degrading UV-radiation. On selecting the approval-relevant accessories, always ensure that they are installed conform to the application.Load voltage and operating voltage of this equipment must be supplied from power supplies with safe isolation (IEC 30 364/UL508), to ensure that the rated voltage of the equipment (24 VDC +20% = 28.8 VDC) is never exceeded by more than 40%.

Service/Maintenance

Repairs are not possible. The approval expires if the device is repaired or modified by a person other than the manufacturer. The most important data from the approval are listed.