


BI8-M18-LI-EXI-H1141 Inductive Sensor – With Analog Output

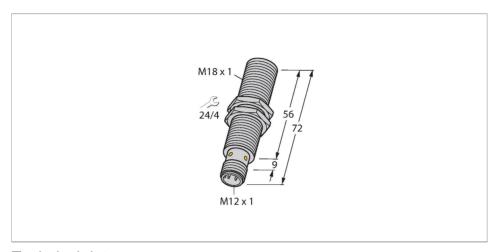


Technical data

ID 1 General data	1535604
General data	
Measuring range 1	15 mm
Mounting conditions F	Flush
Secured operating distance ≤	≤ (0.81 × Sn) mm
	St37 = 1; AI = 0.3; stainless steel = 0.7; Ms = 0.4
Repeatability	≤ 1 % of measuring range A - B
0	0.5 %, after warm-up 0.5 h
Linearity deviation ≤	≤ 5 %
Temperature drift	≤ ± 0.06 %/K
Electrical data	
Operating voltage U _B	1430 VDC
a	at the electrical connection of the sensor
Ripple U _{ss}	≤ 10 % U _{Bmax}
Isolation test voltage 0	0.5 kV
Short-circuit protection y	/es
Wire break/reverse polarity protection n	no/Complete
Output function 2	2-wire, Analog output
Current output 4	420 mA
Load resistance current output	≤ [(U _B -14 V) / 20 mA]
Measuring sequence frequency 2	200 Hz
Approval acc. to K	KEMA 03 ATEX 1122 X Output no. 5

Features


- ■Threaded barrel, M18 x 1
- Chrome-plated brass
- ■2-wire, 14...30 VDC
- ■Analog output
- ■4...20 mA
- ■M12 x 1 male connector
- ■ATEX category II 1 G, Ex-zone 0
- ■ATEX category II 2 D, Ex-zone 21

Wiring diagram

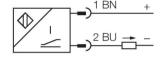

Functional principle

Inductive sensors with analog output from TURCK accomplish simple control tasks. They provide a distance-proportional current signal. Determined by the technology used, the maximum load in 2-wire technology is influenced by the sensor's operating voltage. The load's resistance must be selected so that the supply voltage of the sensor does not fall below 14 volts.

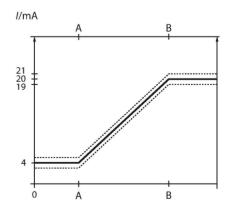




TURCK

Technical data


Internal capacitance (C _i)/inductance (L _i)	0 nF/0 μH
Device marking	EX II 1 G Ex ia IIC T6 Ga/II 2 D Ex ia IIIC T85 °C Db
	(max. U _i = 30 V, I _i = 120 mA, P _i = 600mW)
Mechanical data	
Design	Threaded barrel, M18 x 1
Dimensions	72 mm
Housing material	Metal, CuZn, Chrome-plated
Active area material	Plastic, PA12-GF30
Max. tightening torque of housing nut	25 Nm
Electrical connection	Connector, M12 × 1
Environmental conditions	
Ambient temperature	-25+70 °C
	For explosion hazardous areas see instruction leaflet
Vibration resistance	55 Hz (1 mm)
Shock resistance	30 g (11 ms)
Protection class	IP67
MTTF	751 years acc. to SN 29500 (Ed. 99) 40 °C

Mounting instructions

Mounting instructions/Description

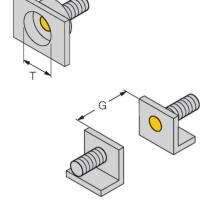


Distance D	2 x B
Distance W	12 mm
Distance T	3 x B
Distance S	1.5 x B
Distance G	24 mm
Diameter active area B	Ø 18 mm

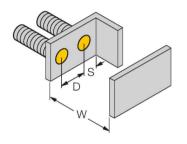


Accessories

BST-18B 6947214

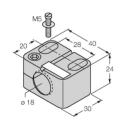

Mounting clamp for threaded barrel sensors, with dead-stop; material: PA6

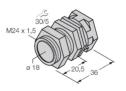

QM-18

BSS-18


Quick-mount bracket with dead-stop; material: Chrome-plated brass. Male thread M24 × 1.5. Note: The switching distance of the proximity switches may change when using quick-mount brackets.

6945102


6901320

MW18 6945004

Mounting bracket for threaded bar

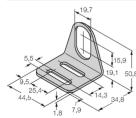

Mounting bracket for threaded barrel sensors; material: Stainless steel A2 1.4301 (AISI 304)

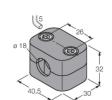


Mounting clamp for smooth and threaded barrel sensors; material: Polypropylene



IM33-11EX-HI

7506443

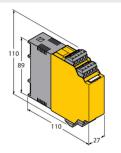

Isolating transducers; 1channel; power supply of 2-wire measuring transducers with HART communication as well as connection of active 2-wire and passive 3-wire transmitters



Instructions for use

Intended use

This device fulfills the directive 2014/34/EC and is suited for use in explosion hazardous areas according to EN 60079-0:2018 + A11 and EN 60079-11:2012.In order to ensure correct operation to the intended purpose it is required to observe the national regulations and directives.

For use in explosion hazardous areas conform to classification

II 1 G and II 2 D (Group II, Category 1 G, electrical equipment for gas-atmospheres and category 2 D, electrical equipment for dust atmospheres)

Marking (see device or technical data sheet)

Local admissible ambient temperature

-25...+65 °C

Installation/Commissioning

These devices may only be installed, connected and operated by trained and qualified staff. Qualified staff must have knowledge of protection classes, directives and regulations concerning electrical equipment designed for use in explosion hazardous areas. Please verify that the classification and the marking on the device comply with the actual application conditions.

This device is only suited for connection to approved Exi circuits according to EN 60079-0 and EN 60079-11. Please observe the maximum admissible electrical values. After connection to other circuits the sensor may no longer be used in Exi installations. When interconnected to (associated) electrical equipment, it is required to perform the "Proof of intrinsic safety" (EN60079-14).

Installation and mounting instructions

Avoid static charging of cables and plastic devices. Please only clean the device with a damp cloth. Do not install the device in a dust flow and avoid build-up of dust deposits on the device. If the devices and the cable could be subject to mechanical damage, they must be protected accordingly. They must also be shielded against strong electro-magnetic fields. The pin configuration and the electrical specifications can be taken from the device marking or the technical data sheet. In order to avoid contamination of the device, please remove possible blanking plugs of the cable glands or connectors only shortly before inserting the cable or opening the cable socket.

Service/Maintenance

Repairs are not possible. The approval expires if the device is repaired or modified by a person other than the manufacturer. The most important data from the approval are listed.